



Open Control Panel and then **Device Manager** as administrator


Change View to **Resources by Connection**

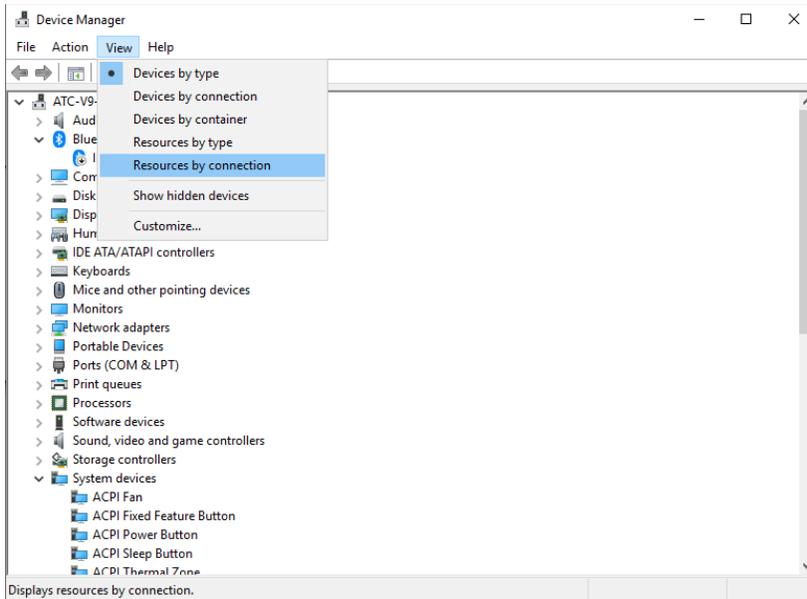


Expand **Interrupt request (IRQ)**

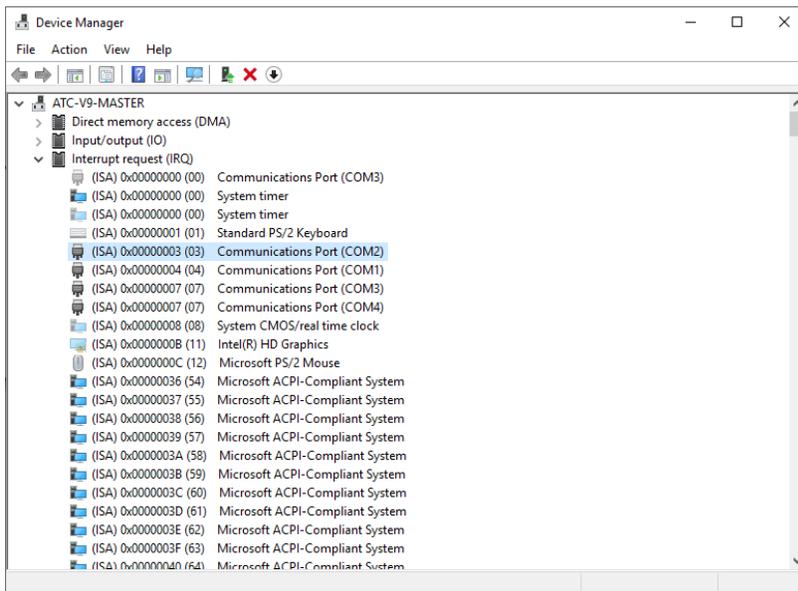

Right Click on the ISA port that matches the guide below and click Properties. In the Properties window, select the Port Settings Tab. In Port Settings click on Advanced.

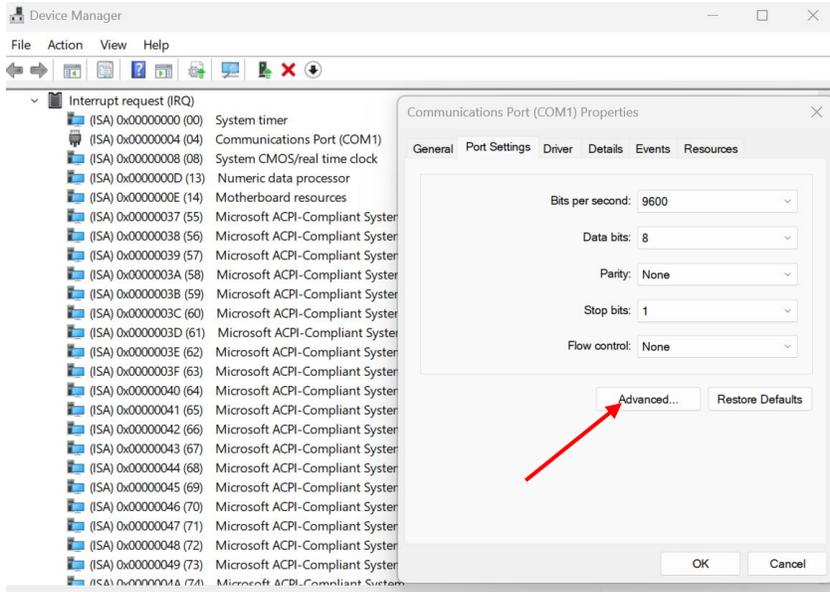

In the advanced window use the Pulldown to select the correct COM port. You may get a popup just click yes or OK.

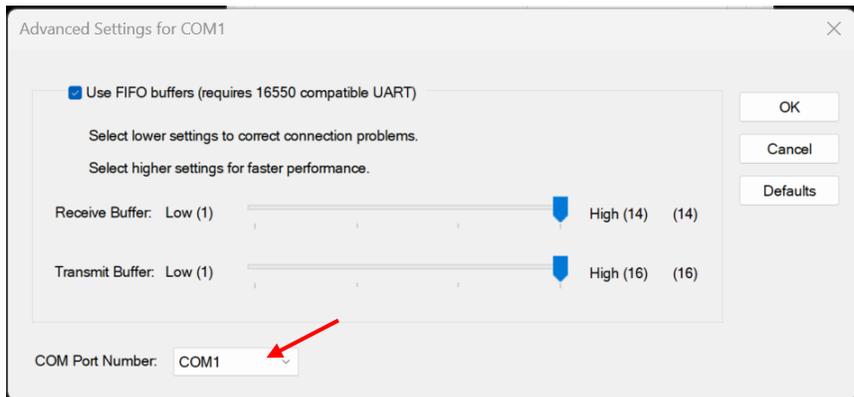

Set **COM Ports** to Correct **IRQs** in Device Manager based on Motherboard in the system:

**V3 (IPC2)(Z3, Z4)**

- 0x00000003 (3) = COM2
- 0x00000004 (4) = COM3
- 0x0000000B (11) = COM4

**V3B (MX3160N)(Z5, Z6)**

- 0x00000004 (4) = COM1
- 0x00000003 (3) = COM2
- 0x00000007 (7) = COM3 & COM4